



Service Bulletin

AMI INCORPORATED • 1500 UNION AVENUE. S. E. • GRAND RAPIDS 2, MICHIGAN

February 18, 1959

BULLETIN NO. 173
(Model "J")

SUBJECT: Model "J" Pushbutton Maintenance

The pushbuttons on Model "J" phonographs are made from acrylic plastic that will resist ordinary cleaning methods. There are, however, certain chemicals commonly found in most shops that can soften the plastic or cause it to craze.

Do not use: Acetone, alcohol, benzene, carbon tetrachloride, gasoline, glass window sprays, lacquer thinners, lighter fluid.

To clean the pushbuttons, wash with soap and water using a soft cloth. Dry them with a clean damp cloth. Rubbing with a dry cloth builds up a static charge that attracts dust. Oil or grease on the pushbuttons can be removed with a cloth wet with kerosene or hexane.

After removing dirt and grease from the buttons, wax them with a good grade of commercial wax. The wax will fill in minor scratches and help prevent further scratching.

The following cleaners and waxes are recommended.

Cleaners

Parko Gloss Polish & Cleaner #4B-L	Turco L-567 Cleaner
Wilco Scratch Removing Compound #55	Noxon Cleaner Polish
O-Cedar of Canada M-37 Plastic Cleaner	Franklin's Plexiglas Cleaner
Ken-Glo	Puritan's Plasti-Kleen
Autogroom Cleaner	Lincoln M-3828 Liquid Cleaner
McAlear Plexi-I-Glo Cleaner & Polish	Simoniz Liquid Kleener

Waxes

Permaseal	Franklin's Plexiglas Wax
Triple Life Wax & Paint Protection	3M Auto Wax
Simoniz Wax	Parko Eze-Wax
Duco #7 Wax	Johnson's Industrial Wax #102-C

APPLICATIONS ENGINEERING

CLB/hr