



# Service Bulletin

AMI INCORPORATED • 1500 UNION AVENUE, S. E. • GRAND RAPIDS 2, MICHIGAN

September 4, 1957

## BULLETIN NO. 152

TO: All Distributing Office Service Personnel  
SUBJECT: Mechanism Trim Interfering with Turntable

Reports from various parts of the country have indicated that in some instances the plastic mechanism trim on the Model "H" has curled upward to the extent that the rim of the turntable rubs against it. If you should encounter this, the following procedure will remedy the situation quite easily without grinding or filing out the opening as has been done in some cases.

1. Loosen the screws holding the left-hand end of the chrome trim to the plastic and mounting bracket. The screws which hold the plastic trim piece to the two small support posts should be left tight.
2. From the left side of the machine, grasp the rear support with the left hand and place the right hand on the front corner of the plastic trim.
3. Pull with the left hand and push with the right hand so that the unsupported tip of the plastic trim will be rotated away from the turntable. Use enough force to bend the support posts just enough to keep the trim from springing back under the edge of the turntable.
4. Flex the tip of the trim upward to see that it will clear the edge of the turntable and tighten the two screws previously loosened.

The same method can be used on the right hand trim if necessary.

CLB/hr

APPLICATIONS ENGINEERING